



CDR 24HTL

Technical data

Carbone Dioxide (CO_2)	
Sensing element	Non-Dispersive Infrared Detector (NDIR)
Measurement range	0-2.000 ppm
Accuracy	+/-30 ppm + 3% of reading
Display resolution	1 ppm
Stability	< 2% of FS over life of sensor (15 years typical)
Calibration	Self calibration
Response time	< 2 minutes for 90% step change
Signal update	Every 2 seconds

Humidity

Temperature

Measuring range	0-100% RH
Accuracy	+/- 3% RH (40 to 60% RH)
Display resolution	0.1% RH
Stability	+/-1% RH per year
Sensor	HS series capacitive sensor

Features

- 3 outputs in one unit for CO₂ + Humidity + Temperature selectable outputs via jumpers 0-10 Vdc, 2-10 Vdc, 0-20 mA or 4-20 mA
- Modbus RS485
- · 3-color backlit LCD display
- Self-calibration (no re-calibration required)
- 15 years life time on CO_2 sensor
- Measures 0-2.000 ppm (on request 0.5.000 ppm and 0-20.000 ppm)
- Accuracy +/-30 ppm +3% of reading
- Power supply 24 Vac/dc

Г

 Office premises Airports Hotels Conference rooms Resturants Apartments Hospitals Schools Meeting rooms

Measuring range	0 to + 50°C		
Accuracy	+/-0.5 °C at 25 °C	Ordering	
Display resolution	0.1 ℃		
Stability	+/-0.1 ℃	Type no.	Description
Calibration	Self compensation	<u></u>	
Sensor	NTC 5K thermistor		
See genaral technical dat	a on next page	CDR 24HTL	Carbon Dioxide (CO_2), Humidity (RH), Temperature (T), Room Transmitter 3 x analog outputs with Modbus and LCD Display



CDR 24HTL Aug.11

Technical data

General

Warm up time	48 hours first time or using again after power off for longer time. 5 minutes (operation)	
Power supply	24 Vac/dc	
Consumption	1.8 W max. ; 1.2 W avg.	
Analog outputs	0-10 Vdc, 2-10 Vdc, 0-20 mA or 4-20 mA selectable outputs via jumper	
LCD	3 color backlit LCD CO2, Humidity, Temperature Green = 1000 ppm Yellow 1000 ppm < CO2 = 1400 ppm Red > 1400 ppm	
RS485 interface	RS-485 with Modbus protocol 19200bps,15KV antistatic protection, independent base address	
Operating conditions	0 to +50°C 0 to 95% RH, non condensing	
Storage conditions	-40 to +70°C	
Protection	IP 30	
Weight	240 g	
Dimensions	130 x 85 x 37 mm	
Installation	Wall mounting with 65x65 mm or 2"x4" wire box	
Housing	PC/ABS fireproof plastic material	

Important Safety Information

Always cut off power before mounting, removing, and cleaning the alarm.

Notice the supply power voltage of the transmitter: 24 Vac/ Vdc.




Mounting and Wire Connection

Install the transmitter in the position of 1.2-1.3 m high from the ground or the position where you need to collect the measurement data. Do not mount it behind the door, in the corner or near heat source, diffuser or any steam source, in direct sunlight; also do not mount it near the garbage bin, gas oven to prevent the evaluation error of the alarm.

See the dimension in figure 2.

Follow the step 1-3 in figure 1, power off and put the screwdriver into the groove at the bottom of the transmitter press the lock lightly, separate the face cover from the back cover.

Fix the mounting board on the wall with the bolt. Connect the electricity wire to the terminal (see figure 2 and table 1). Make sure the connection is correct. Follow the step 4 and 5 in figure 1 to close the cover

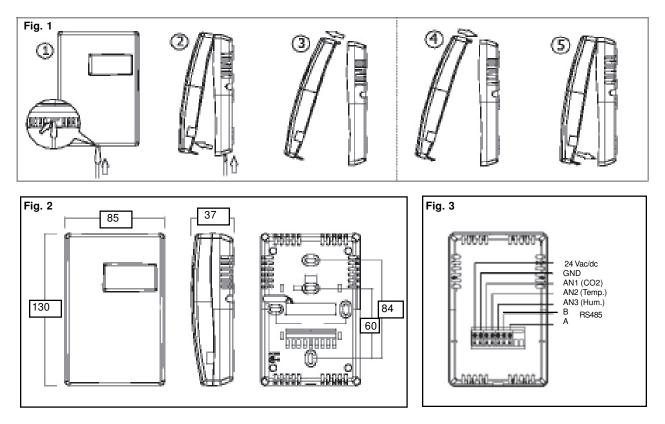

Connection Terminal	Function	Electrical Data
1 G+	Power (+)	24Vac / 24Vdc +
2 G0	Power ground (-)	24Vac / 24Vdc
3 OUT3 (CO2)	Analog output (+)	0-10 Vdc correspond to 0~2000ppm default)/ 4~20mA correspond to 0~2000ppm
4 OUT2 (Temp)	Analog output (+)	0-10 Vdc correspond to 0~100%RH(default)/ 4~20mA correspond to 0~100%RH
5 OUT1 (Hum)	Analog output (+)	0-10 Vdc correspond to -20 to +60°C (default)/ 4~20mA correspond to -20 to +60°C
6 - (B) (R)		
7 + (A) (R)	Modbus RS485 interface	



Analog output selection


The analog outputs are 0-10 Vdc (default). If you want to change it to the current outputs, please follow the below steps.

Power off and remove the face cover,

you can see a set of short-circuit block jumper S1-S6 in the middle of the right PCB board. When you block the up two pin of the S1-S6, the analog output is voltage output; when you block the down two pin of S1-S6, the analog output is current output.

There is a set of short-circuit block jumper J1-J4 in the top of the PCB board. As you put the J1 connection, the analog output is 2-10 Vdc or 4-20 mA, as the J1 is disconnected, the analog output is 0-10 Vdc or 0-20mA.

The J2, J3 and J4 are just for manufacture test, the default is disconnection. Don't change it!

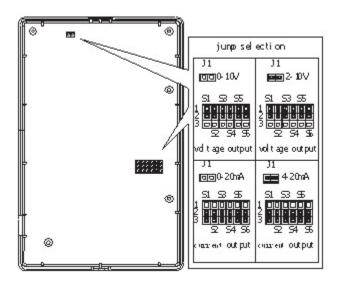

Operation and notice

When power on, there is a red light on through the middle of the end of the face cover, that means the transmitter is working on.

Then the measured temperature and humidity are appeared on the upper line.

The 10 sec. is started to count down until 0 and back to display CO2 measurement.

After the count down, the analog output activated.

In case of initial power on or used again after power off for long time (like one month), the CO2 measurement will be stable after 24 hours at least.

Don't shake or hit the transmitter fiercely to prevent damaging the CO2 sensor when transport or mount the transmitter

When checking the analog output, don not breath to the transmitter directly. The breath will affect the CO2 measurement. The correct manner is connect a extended data cable to the transmitter, when the measurement become stable after 10 min from the moment of power on,

then check the analog output by extended cable.



Advanced setup by RS485 communication interface

Menu Display	Parameter	Range of setup	Default
-1	RS485 communication address	1-255	1
-2	RS485 Communication rate	1-4800bps, 2-9600bps, 3-14400bps, 4-19200bps, 5-38400bps	5
-3	RS485 check-bit / stop-bit	 0- no check, one stop bit; 1- no check, two stop bits; 2- odd check, one stop bit; 3- even check, two stop bits 	1
-4	CO ₂ calibration set point	0-2000 ppm	0
-5	Temperature calibration set point	-40.0 to +100.0°C / -40.0 to +212.0	50
-6	Humidity calibration set point	0.0-100.0% RH	50.0
-7	CO2 analog output 0V/4mA correspond to CO2 level	0-2000 ppm	0
-8	CO2 analog output 10V/20mA correspond to CO2 level	0-2000 ppm	2000
-9	Temp analog output 0V/4mA correspond to temp. level	-20 to +100°C	-20
-10	Temp analog output 10V/20mA correspond to temp. level	-20 to+100°C	60
-11	Humidity analog output 0V/4mA correspond to humidity level	0-100% RH	0
-12	Humidity analog output 10V/20mA correspond to humidity level	0-100% RH	100
-13	Boundary of green and yellow backlight	0-2000 ppm	1000
-14	Boundary of yellow and red backlight	0-2000 ppm	1400
-15	Celsius and Fahrenheit selection	0-celsius, 1-fahrenheit	0
-16	Warming time	1-600	120
-17	The maximum limit of CO2 measurement set point	1-9900	2000
-18	CO2 zero point calibration allowed	0-1	0
-19	CO2 signal point calibration allowed	0-1	0
-20	CO2 signal point calibration object	1-2000	400
-21	CO2 ASL calibration	0-5000 feet	0
-22	CO2 calibration	±200 ppm	0
-23	Temperature calibration	-3 to +3°C, -6°F to +6°F	0
-24	Manual humidity calibration	-9 to 9% RH	0

We reserve the right to make changes in our products without any notice which may effect the accuracy of the information contained in this leaflet.



On request,

types and options at minimum 10 pcs per each product

Type no.	Description
CDR 24	Carbon Dioxide (CO_2), room transmitter 1 x analog output with Modbus
CDR 24T	Carbon Dioxide ($\rm CO_2$) and Temperature (T), room transmitter 2 x analog outputs with Modbus
CDR 24TL	Carbon Dioxide (CO_2) and Temperature (T), room transmitter 2 x analog outputs and LCD
CDR 24HT	Carbon Dioxide (CO_2), Humidity (RH) and Temperature (T), room transmitter 3 x analog outputs with Modbus
05	Carbon Dioxide (CO_2) ppm range 0-5.000 ppm
20	Carbon Dioxide (CO ₂) ppm range 0-20.000 ppm
DPA CDR 24	Desk Plate Adaptor for CDR 24-series (To mount the CDR 24-series on a desk)